



"Convenience at its best!"

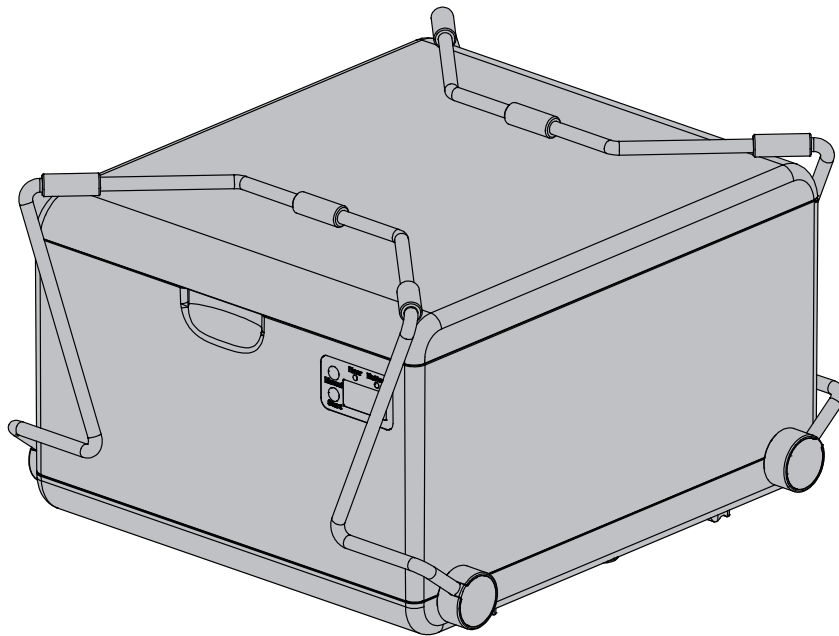

Automatic Sealing Toilet

User Manual

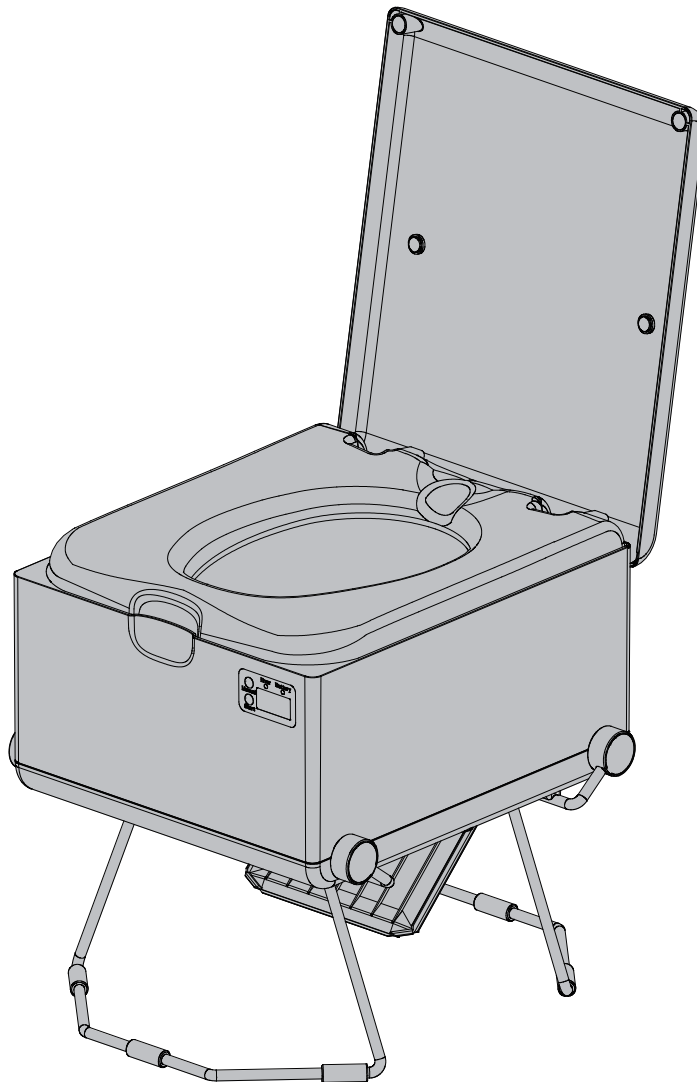

Prior to using this product, please read and securely store the user manual.

Preface

Product Features:

One-touch automatic packaging:

Simply touch the button, and the toilet will automatically seal and package the waste, eliminating the need for tedious manual steps.

Complete sealing:

Utilizing advanced sealing technology, it ensures the complete sealing of waste, preventing odors and leaks, and providing an excellent sanitary environment.

Environmental hygiene:

It uses a special solidifying agent that rapidly solidifies waste, effectively preventing bacterial growth, and reducing environmental impact. and leaks, and providing an excellent sanitary environment.

Clean, simple, and odorless:

The use of solidifying agent makes the toilet clean, simple, and odorless, providing users with a comfortable experience.

Lightweight and foldable:

The toilet is lightweight, compact, and foldable, making it easy to carry and store, suitable for various outdoor activities and compact spaces.


Choosing this automatic packaging toilet becomes an ideal choice for sanitary equipment.

Warnings:


- For your safety and proper use of this product, please follow these guidelines.
- Always use the provided charger to charge the product. Do not use other chargers to avoid product damage or safety risks
- Do not pour or flush water directly onto the product, as it may cause malfunction or danger.
- Avoid inserting your hands or any other body parts into the internal mechanism of the product during operation to prevent accidents.
- Keep the product away from flammable materials or unextinguished cigarettes, and ensure a safe distance from any heat source.
- Do not consume the solidifying agent. Keep it out of reach of children and pets. In case of accidental ingestion, seek medical attention immediately.
- Use only the designated solidifying agent for this product. Do not use substitutes.
- Do not place sharp objects inside the storage bag to avoid damaging the bag or other components.
- Individuals weighing over 150 kilograms should not use this product.
- Do not sit on the product and press the buttons on the control panel.
- Do not disassemble, repair, or modify the product yourself, as it may cause damage or safety issues.
- Clean the bottom of the product promptly if you find packed bags or foreign objects.
- Replace the storage bag with a new one when the "STOP" sign appears on it.
- Ensure that the product is placed on a stable surface before use.

Packaging List

◆ This product comes with the following parts and accessories included.
Before using, please ensure that all parts and accessories are present. If any parts are missing or damaged, please immediately inform the store where you purchased it.

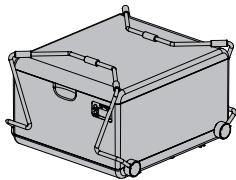

Main Body *1

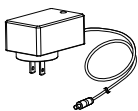

Charger *1





User Manual *1




Certificate of Conformity *1

Dimensions

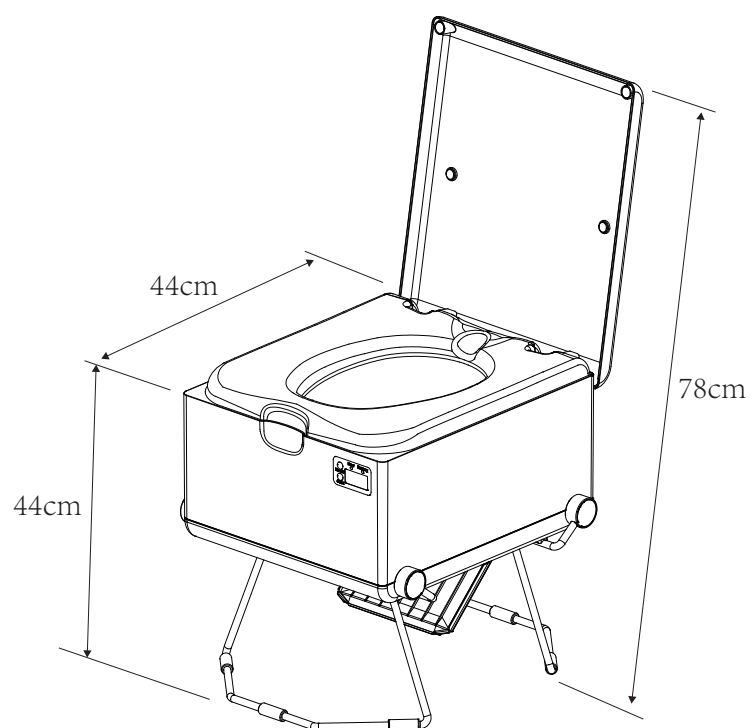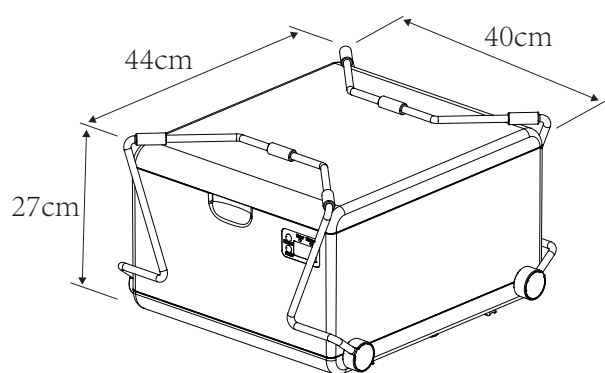


User manual


- 1 Please pull the two support legs of the product apart towards the sides until you hear a "click" sound. At this point, the bottom barrier will automatically spring open.

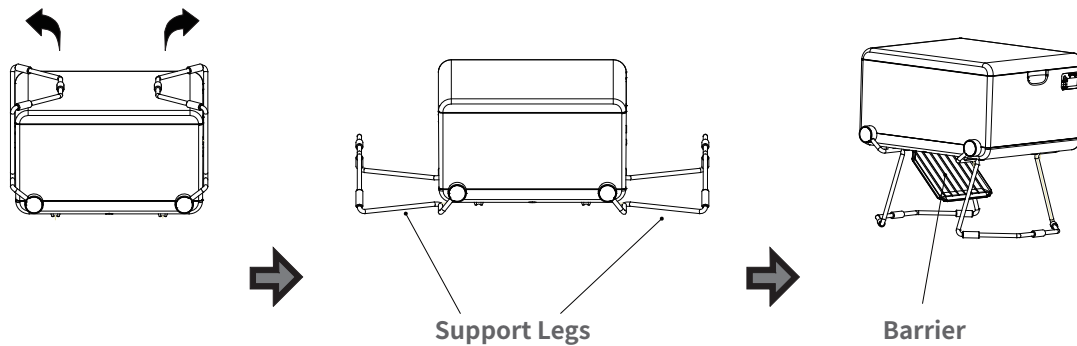

- 2 Use the dedicated charger provided with the product to charge it. While charging, the "Battery" indicator light on the control panel will flash green. Once the battery is fully charged, the "Battery" indicator light will turn off, and the control panel will display "100".
Attention: Please charge the product promptly when the battery level reaches "25". For new products, it is recommended to fully charge them before the initial use.

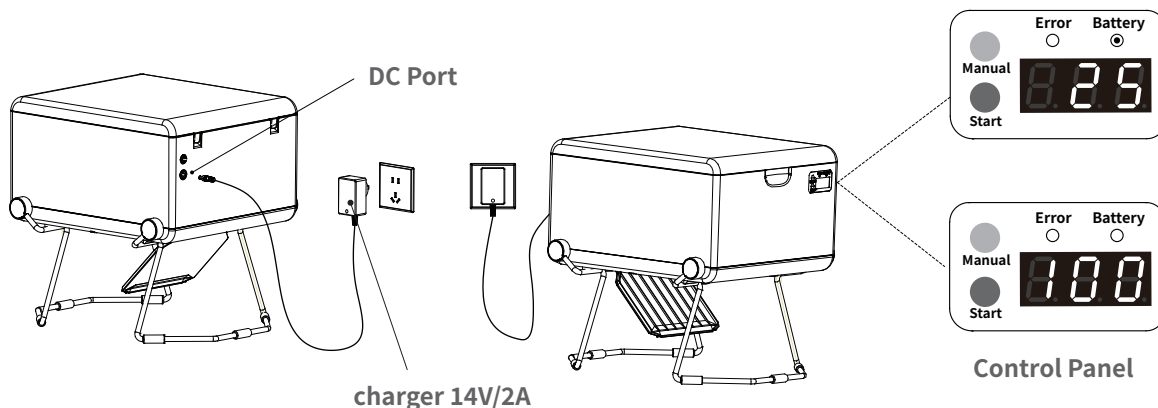


- 3 Open the top cover, remove the cushion, and take off the fastening ring.

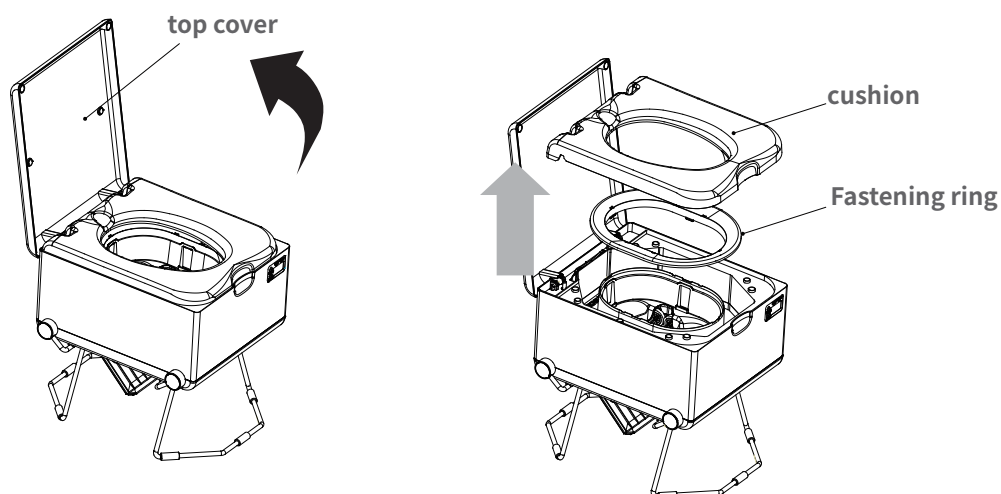


User manual


- 4** Insert the film roll onto the designated film roll base, ensuring that the arrow direction on the film roll's fastening straps is facing upward.

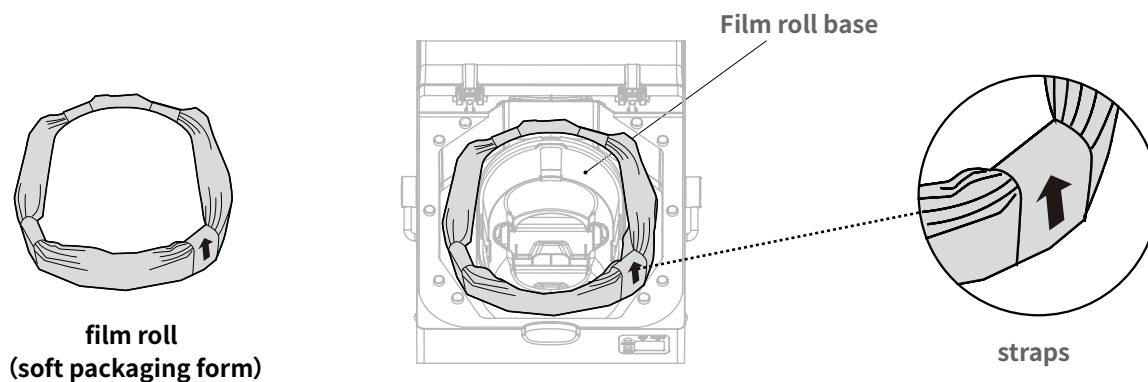

- 5** Undo the four straps on the film roll, remove them, and then secure the fastening rings.

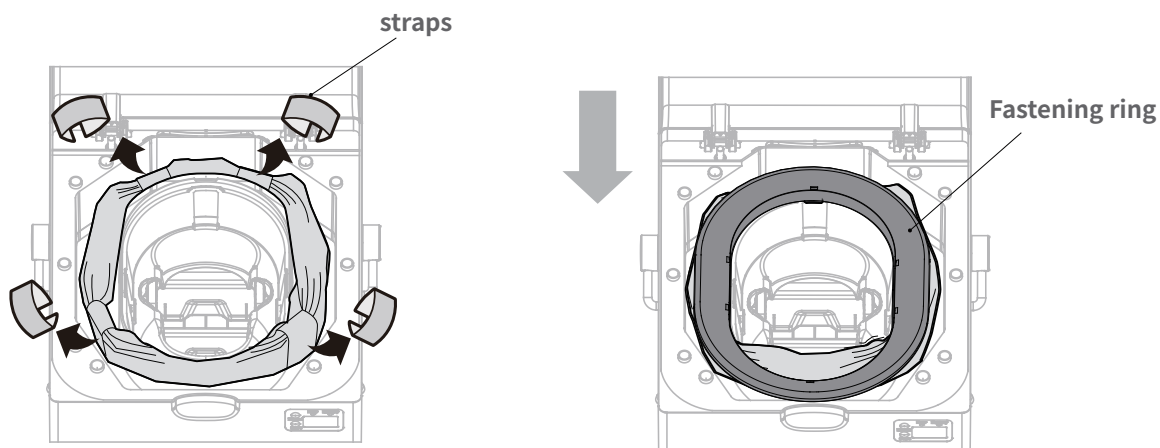


- 6** Pull out the first layer of the film from the outside and lift it up approximately 20 centimeters. Gather the top part of the film together. Push the film roll held in hand into the toilet.

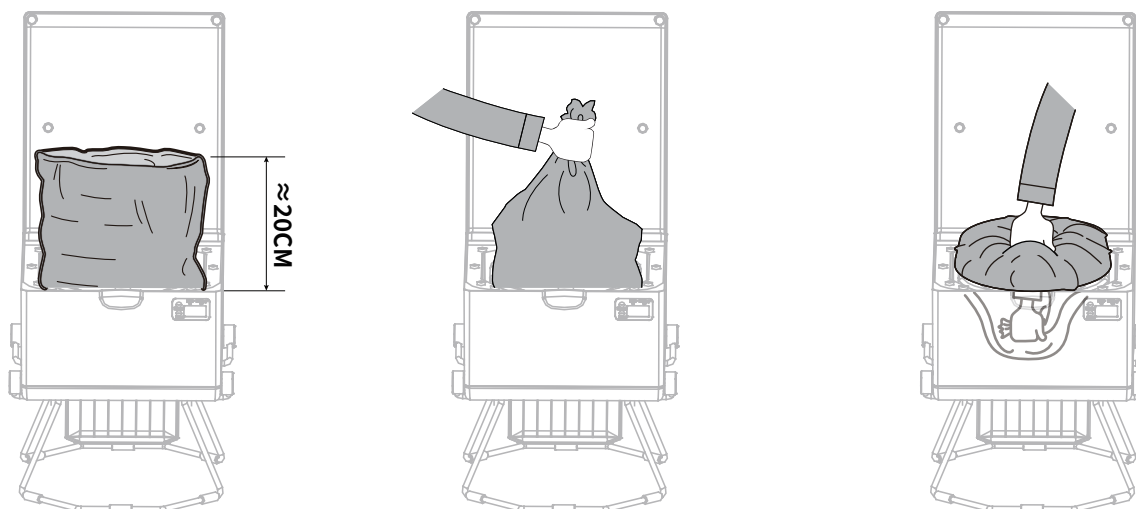


User manual


- 7** Please continue to push the guide into the middle of the guide wheel vertically until there is no resistance. Lift the guide and place it back in its original position. Put the cushion on top.

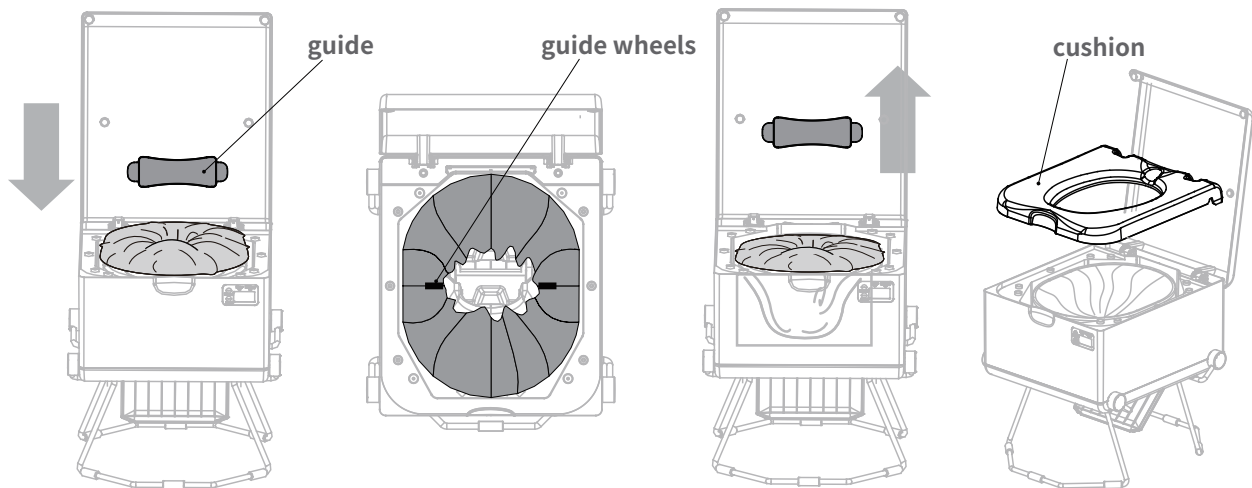

- 8** Press the power switch button on the back of the product, and it will enter a self-checking state for approximately 2 seconds. When you hear a "beep" sound, it indicates that the self-check is complete, and the product enters the standby mode. In the standby mode, the control panel will display the battery level information.


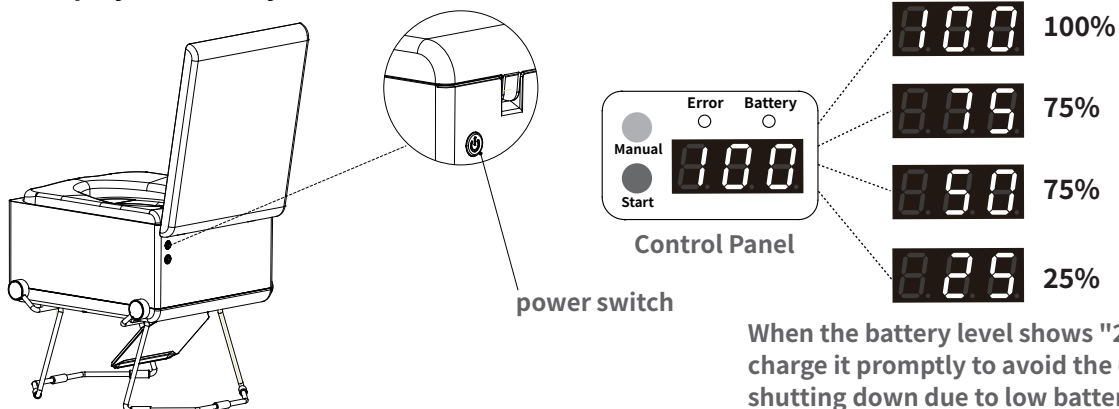


- 9** Press and hold the "Start" button on the control panel for more than 2 seconds to enter the sealing operation mode. The sealing process takes approximately 2-3 minutes. Prior to the completion of the sealing process, the control panel will display a countdown and emit a "beep" sound when the countdown ends. At this point, the sealing process for the storage bag is completed, and you can remove the initially sealed bag. Simultaneously, the control panel will return to standby mode and display the battery level information.

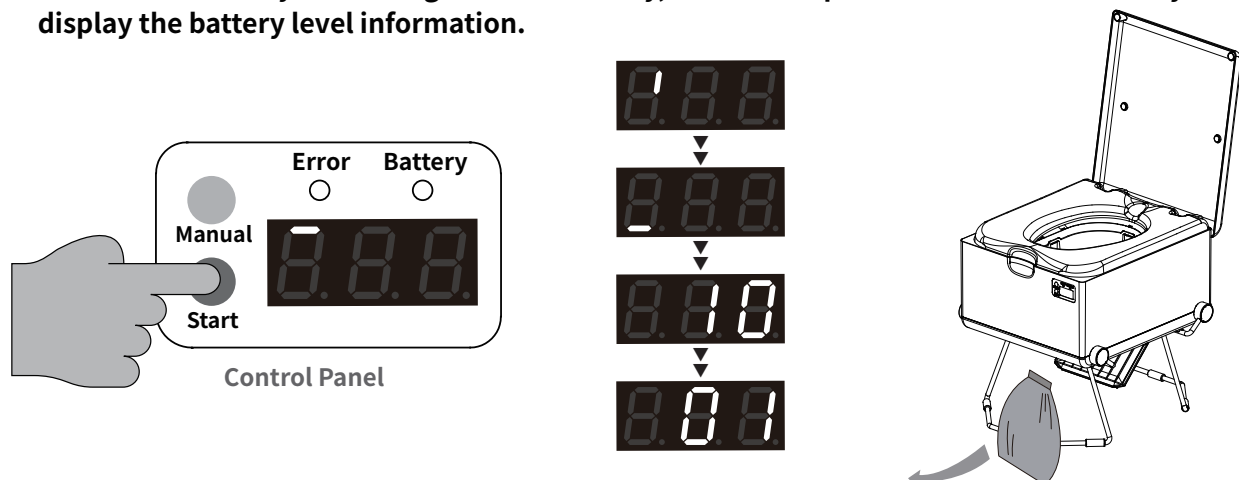


User manual


- 10** Take out a small packet of dedicated coagulant, tear open the bag along the indicated opening, and pour the coagulant into the storage bag. This way, you can start using the toilet.

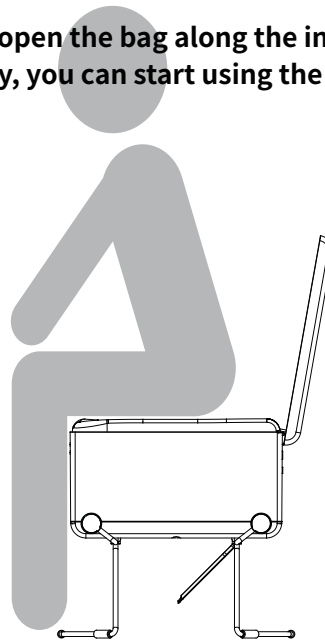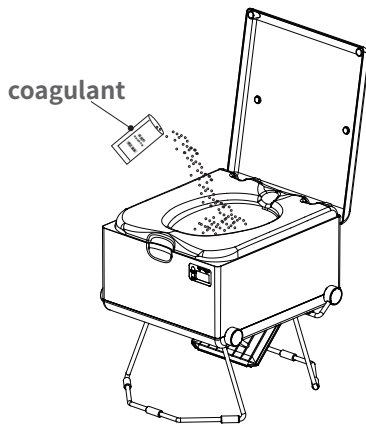


- 11** Press and hold the "Start" button on the control panel for more than 2 seconds to enter the sealing operation mode. The sealing process takes approximately 2-3 minutes. Prior to the completion of the sealing process, the control panel will display a countdown and emit a "beep" sound when the countdown ends. At this point, the sealing process for the storage bag is completed. Please remove the bag that has been sealed at the bottom and dispose of it in the appropriate trash bin according to the waste sorting regulations. At the same time, the control panel will return to standby mode and display the battery level information.

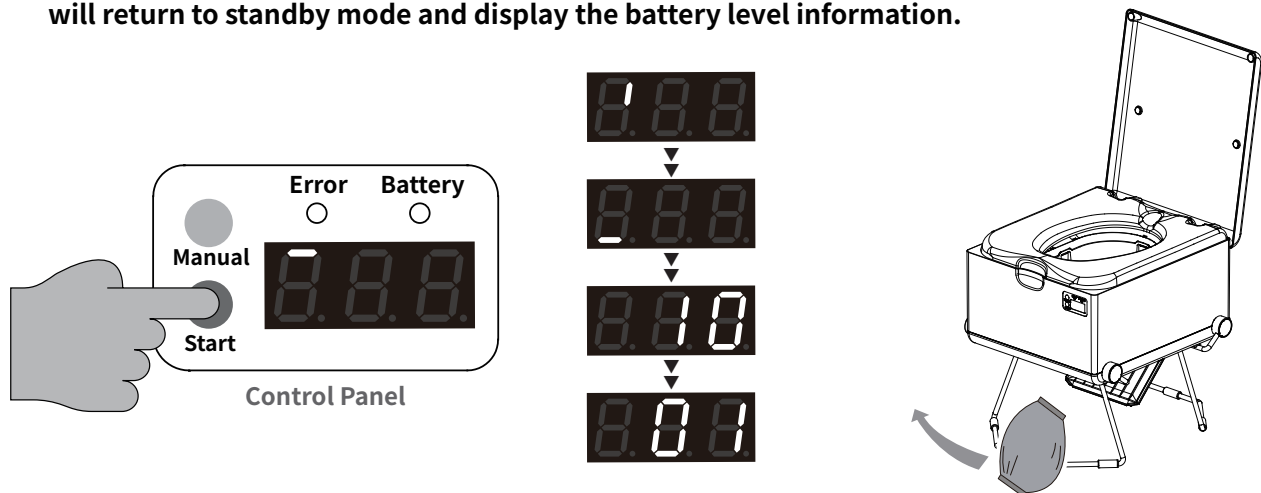


Note: When not in use for an extended period of time, it is recommended to fold up the support legs of the product to save space and protect them. Additionally, please switch off the power switch on the back of the product to avoid unnecessary battery drain. This ensures that the product remains in a safe and energy-efficient state when not in use.

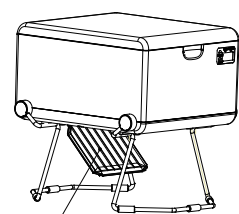

Barrier

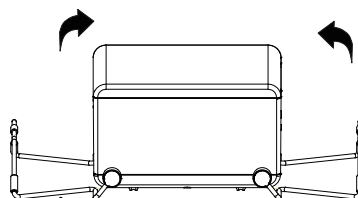


Support Legs

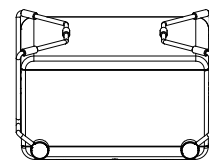


Replacing the film roll


- 1 When the bag displays the "STOP" message, it indicates that the storage bag is running out and needs to be replaced. At this point, press and hold the "Manual" button on the control panel until all remaining storage bags have been dispensed.

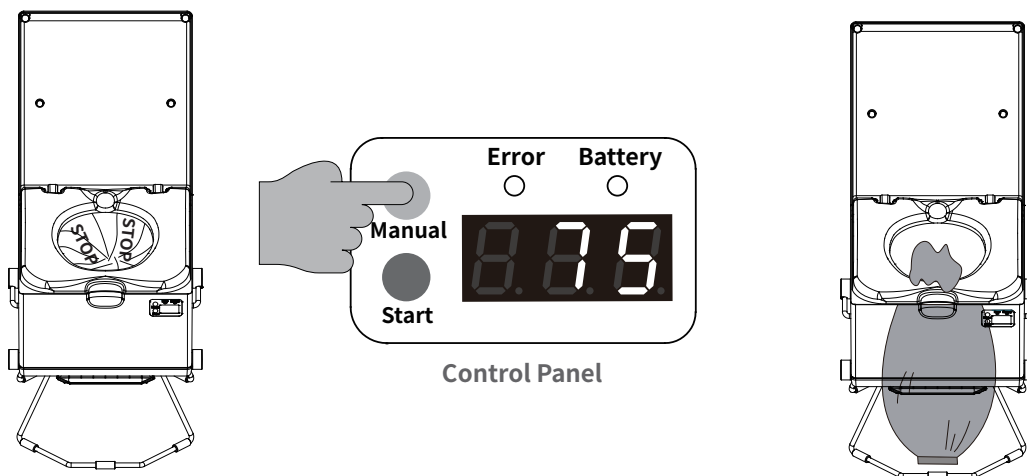

- 2 Please take out the cushion and the retainer rings separately. Then, place the film roll onto the designated film roll base, ensuring that the arrow direction on the film roll's fastening straps is facing upward.

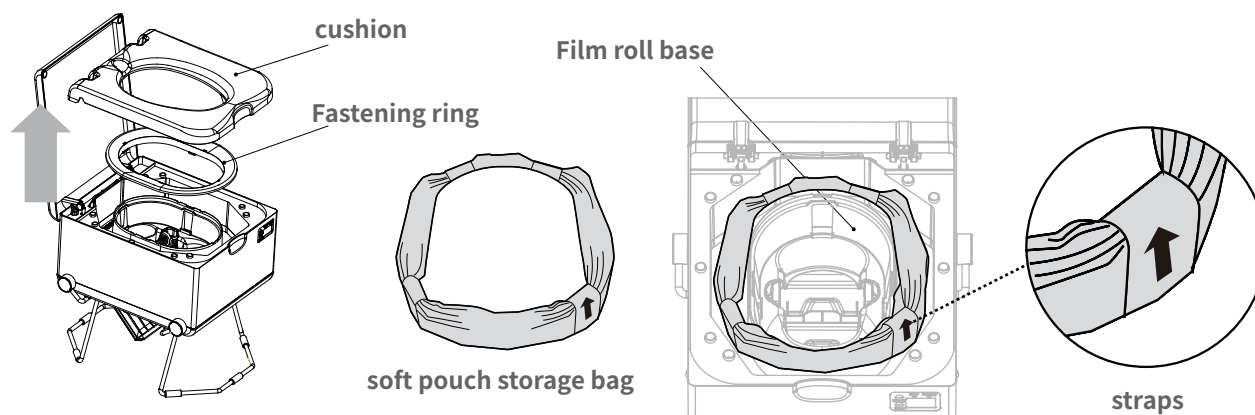


- 3 Undo the four straps on the film roll, remove them, and then secure the fastening rings.

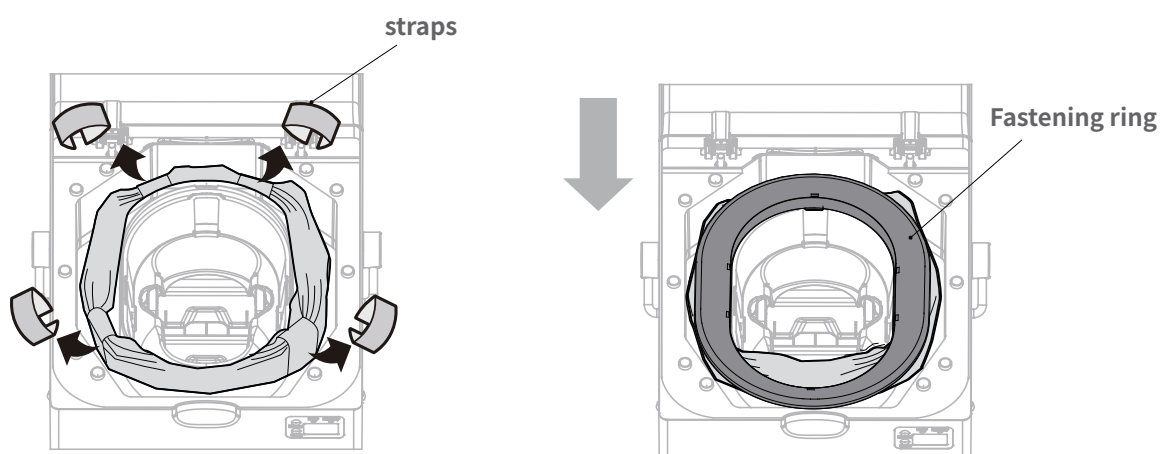


Replacing the film roll


- 4** Pull out the first layer of the film from the outside and lift it up approximately 20 centimeters. Gather the top part of the film together. Push the film roll held in hand into the toilet.

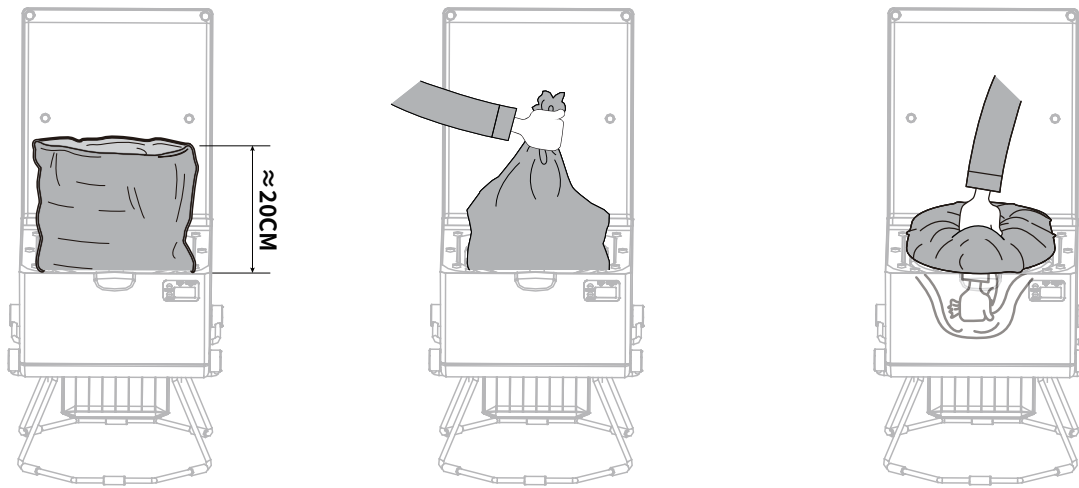



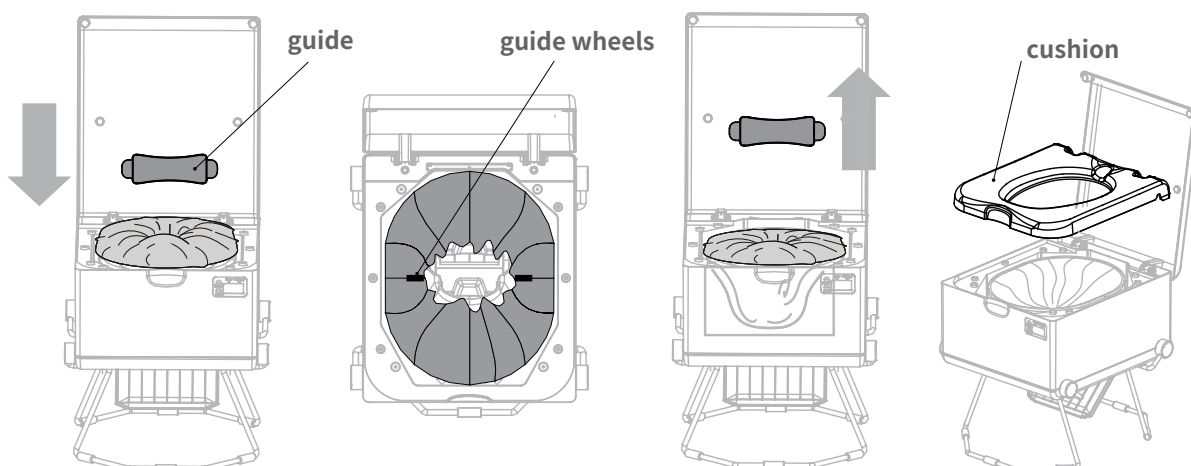


- 5** Please continue to push the guide into the middle of the guide wheel vertically until there is no resistance. Lift the guide and place it back in its original position. Put the cushion on top.

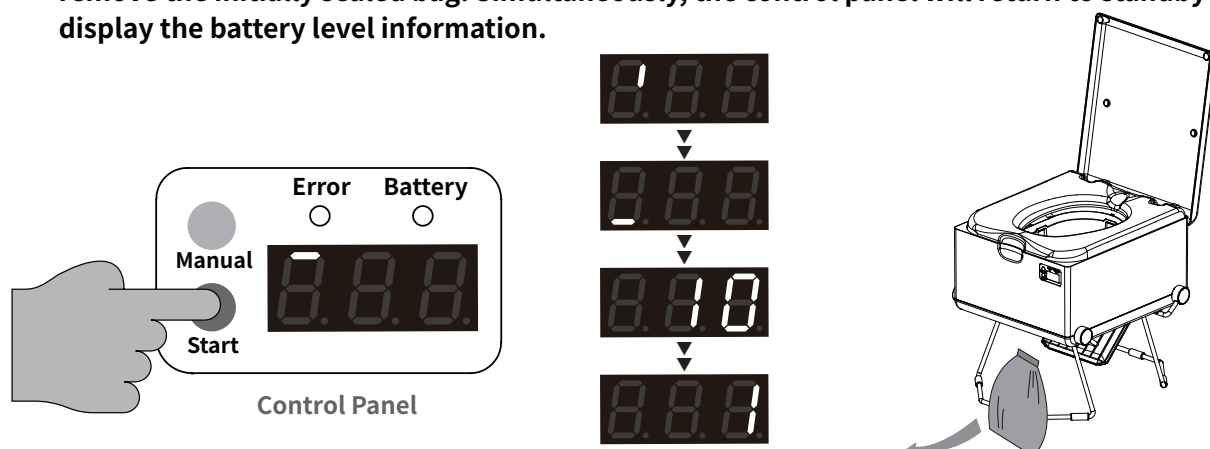

- 6** Press and hold the "Start" button on the control panel for more than 2 seconds to enter the sealing operation mode. The sealing process takes approximately 2-3 minutes. Prior to the completion of the sealing process, the control panel will display a countdown and emit a "beep" sound when the countdown ends. At this point, the sealing process for the storage bag is completed, and you can remove the initially sealed bag. Simultaneously, the control panel will return to standby mode and display the battery level information.



Fault and resolution

Display	Error code	Fault cause	Problem-solving method
	E1	Temperature Sensor Open Circuit Protection	Please contact the after-sales service department or the product manufacturer for assistance.
	E2	Sealing Heating Element Open Circuit Protection	Please contact the after-sales service department or the product manufacturer for assistance.
	E3	Timeout Protection During Compression Forwarding	The device has detected foreign objects during the sealing and compression process. Please clean the sealing area from any foreign objects, turn off the power switch, and then turn it back on. If the issue persists, please contact the after-sales service department or the product manufacturer.
	E4	Current Overload Protection During Compression Clamping	The device has detected foreign objects at the sealing position during the sealing and compression process. Please clean the area of any foreign objects, turn off the power switch, and then turn it back on. If the issue persists, please contact the after-sales service department or the product manufacturer.
	E5	Current Overload Protection During Retraction After Compression	The device has detected foreign objects during the sealing and compression process. Please clean the sealing area from any foreign objects, turn off the power switch, and then turn it back on. If the issue persists, please contact the after-sales service department or the product manufacturer.


Fault and resolution

In such cases	Remedial measures
The control panel is not displaying anything.	Please press the power switch button located at the back of the product to turn on the power.
	The battery of the product has been depleted due to prolonged non-use. Please charge the product.
	If the above steps do not resolve the issue, please contact customer service or the manufacturer for assistance.
Unable to charge or unable to charge fully	Please use the charger provided with the product to charge it.
	If you have accidentally misplaced the charger, please contact the customer service department or the manufacturer of the product as soon as possible.
The power went out suddenly while sealing the bag.	When the battery level is below 25%, it may cause issues with the sealing process. Please use the charger provided with the product to charge it.
I feel some rocking when sitting on it.	Please move the product and place it on a more even surface.
	Fully extend the support legs and wait for the "click" sound before proceeding.
The film has been torn.	Press and hold the "Manual" button on the control panel to eject the damaged bag. After confirming that the new bag is not damaged, press and hold the "Start" button for at least 2 seconds to reseal it. This will allow you to resume normal operation.
The film has not been cut off.	Clean the residue from the sealing area.
	Clean the used film or foreign objects from the bottom of the product.
Smoke is coming out and there are unusual noises.	Please stop using it immediately, turn off the power switch, and contact the customer service department or the manufacturer of the product.
If you have accidentally ingested a coagulant	please seek medical assistance immediately.
Attachment is lost or consumables have been depleted.	Please contact the customer service department or the manufacturer of the product to make a purchase.



Maintenance and care

- When not using the product for an extended period, please make sure to turn off the power switch.
- If the product has not been used for a long time, please replace the storage bag with a new one before using it again.
- Due to the built-in lithium battery, please regularly charge the product to maintain the battery's good condition. It is recommended to charge the product at least every 3 months.
- The seat cushion can be easily removed for cleaning.
- If you encounter any unresolved issues, please contact the customer service department or the manufacturer of the product immediately.

Parts that can be removed for cleaning.

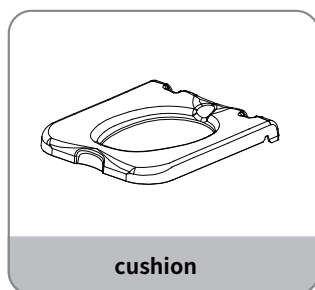

◆可选购的耗材

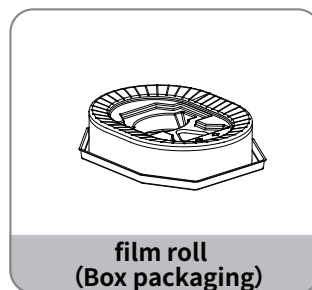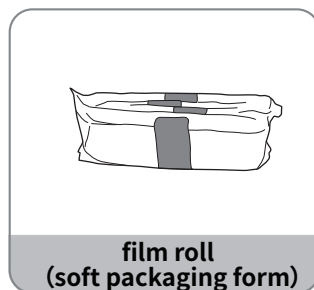

Specifications

Model	LE-310	LE-320	LE-330
Color	Pearl White	Silvery	Dark Grey
Dim(Expanded)	L44×W40×H78CM	L44×W40×H78CM	L44×W40×H78CM
Dim(Folded)	L44×W40×H27CM	L44×W40×H27CM	L44×W40×H27CM
Dim(Seat)	35×41CM	35×41CM	35×41CM
Width(seat)	35CM	35CM	35CM
Weight Limits	150KG	150KG	150KG
Height(Seat)	44CM	44CM	44CM
Power(Watts)	60W (max)	60W (max)	60W (max)
Voltage	Charger: Input 100-240VAC,Output 14V/2A		
Capacity	Power Bank 57WH		
Net Weight	8.0KG		
Materials	Stainless Steel, Plastic		
Operation	0°C - 40°C 20% - 80%RH		
Storage	-20°C - 60°C 5% - 95% RH		